Signal Light with High Volume Built-in Buzzer S60ADB/ S60ADL/ S60ADS





Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.


- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

A Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

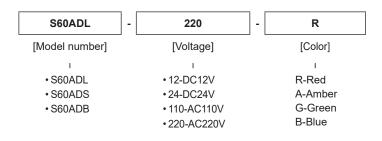



Please scan the QR code for more detailed product information.

www.qlight.com

Product Specifications

■LED Steady/Flashing Signal Light

Model number	Voltage	Current	Certificate	Weight	Color
S60ADL	DC12V	165mA		0.17kg	R - Red
	DC24V	125mA	CE	0.17kg	A-Amber
	AC110V	55mA		0.32kg	G - Green
	AC220V	35mA		0.32kg	B - Blue

■Xenon Lamp Strobe Signal Light

Model number	Voltage	Current	Certificate	Weight	Color	
S60ADS	DC12V	550mA		0.29kg	R - Red	
	DC24V	285mA	CE	0.29kg	A - Amber G - Green	
	AC110V	85mA		0.27kg		
	AC220V	75mA		0.27kg	B - Blue	

■Bulb Steady/Flashing Signal Light

Model number	Voltage	Current	Bulb specifications					
			Volts/ Watts	Confi- guration	Part#	Certificate	Weight	Color
	DC12V	1A	12V10W	T16x35 15S	9	CE	0.19kg	R - Red A - Amber G - Green B - Blue
	DC24V	555mA	24V10W		10		0.19kg	
	AC110V	160mA	110V10W		12		0.18kg	
	AC220V	115mA	220V10W		13		0.18kg	


• Buzzer sound volume : Max.95dB at 1m

• Protection rating : IP54


• Ambient operating temperature : -30°C to +50°C

Dimensions

(Units : mm)

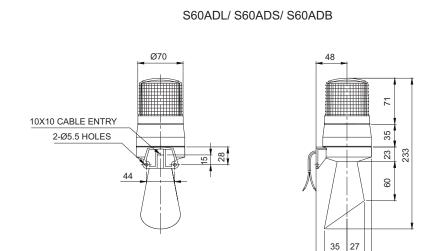


Wiring Instructions

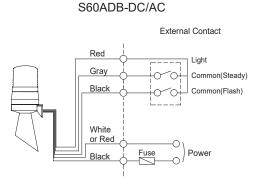

S60ADL/ S60ADS-DC/AC


86

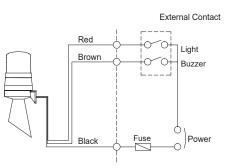

• S60ADB : External power line - UL1015 AWG18(0.75sq) x 2C 400mm External signal line - UL1007 AWG22(0.3sq) 400mm

- S60ADL/ S60ADS : External power line UL1007 AWG22(0.3sq) 400mm
- This product can be wired regardless of polarity.


Parts Definition/ Installation

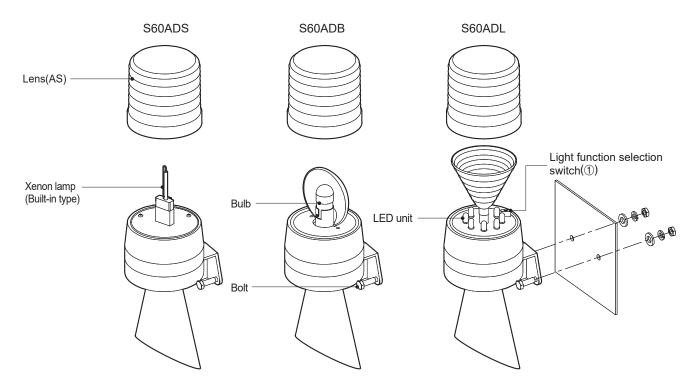

- First, machine taps or holes on the mounting surface.
- The mounting hole of this product bracket is 6mm in diameter.
- ${\ensuremath{\cdot}}$ When machining taps, fasten the bolt through the mounting hole of the bracket.
- When machining holes, insert the bolt through the hole of the bracket, and tighten the nut from the opposite side of the mounting surface.


Light Function Selection(S60ADL only)

• Please refer to the chart below to use light function selection switch(①) located inside the product.

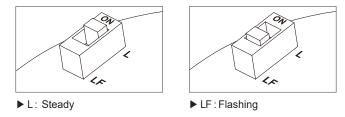

• Default function is set at steady LED. Select the desired function for your application during installation.


Bulb Replacement Instructions

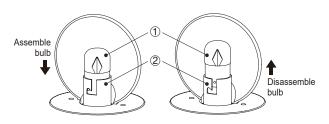

- Please wait at least 1 minute after turning off the power before replacing the bulb.
- In order to dissemble the bulb, please push down the bulb(①) lightly and screw it counterclockwise.
- In order to put the bulb in to the unit, please place the bulb(①) in the socket(②) and screw it clockwise while lightly pushing down the bulb.

Mounting Hole Specifications

• Machine holes on the mounting surface referring to the diagram below.

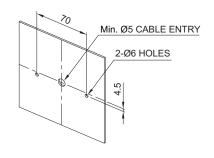

S60ADL/ S60ADS/ A60ADB

Installation Environment and Protection Rating


- This product is designed for use with protection rating of IP54.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP54), it may cause malfunction or damage to the product.
- In case of outdoor applications, install the product in the upright position. Do not install the product horizontal or upsidedown positions where water can potentially penetrate into the product and impact it's operation.
- For further information, please visit our website (www.qlight.com).

Product installation direction

Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.


· BEACON/SIGNALING LIGHT


* For products with a protection rating of less than IPX4, please install it vertically.

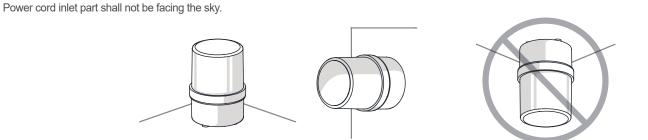

· ELECTRONIC SOUNDER/SIGNAL HORN

Sounder part shall not be facing the sky.

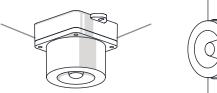

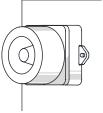










· HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS

Sounder part shall not be facing the sky.



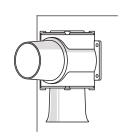



· SIGNAL TOWER LIGHTS

Power cord inlet part shall not be facing the sky.

* For products with a protection rating of less than IPX4, please install it vertically.



Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com) Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111) Qlight Overseas Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel : +82-51-620-4100 Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com

China Factory/ Shanghai Sales Office | #Room 333 Building B, #11, Lane 450, Zhenda Road, Baoshan District, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929

China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Qightec You can expect prompt service if you have exact information such as model name, symptom, telephone number and address. ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE. RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE. Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507) Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)

www.qlight.com EN - S60ADL - 2405A